



Scoreboard Guide

December 2022



Table of Contents

WT Scoreboard

1	Get started with scoreboard selections
2	Scoreboard Selections – Race Mode
5	Scoreboard selections – Display Mode
6	Media shows
7	Add media items

WT Scoreboard App

9	Setting up WT Scoreboard
10	Scoreboard Settings
11	Lane Settings
12	Race Position Settings
13	Alternating background lines setting
14	Name format setting
16	Display a Race

Wylas Timing Scoreboard

Getting started with WT Scoreboard Selections

Wylas Scoreboard allows you to choose whatever you want to display on any of your scoreboards while running a meet.

Customized messages and images can be displayed in loop during the warm up, break or at any time you want. You can even choose what images and text messages you want to show before a race starts.

Go to the Scoreboard tab in the Recorder UI.

 
The column on the left will show Scoreboards that have been connected to the Recorder during this session. Each Scoreboard will indicate

- Whether it is currently connected
- Whether it is in Race Mode (the default) or Display Mode
- An unique identifier in case you have multiple displays.

The column on the right contains 2 sub tabs : Race Mode and Display Mode.

The Race Mode tab is where you configure the media items to show on Ready and Start of each race.

The Display Mode tab is where you configure sequences of media items you would like shown in a loop.

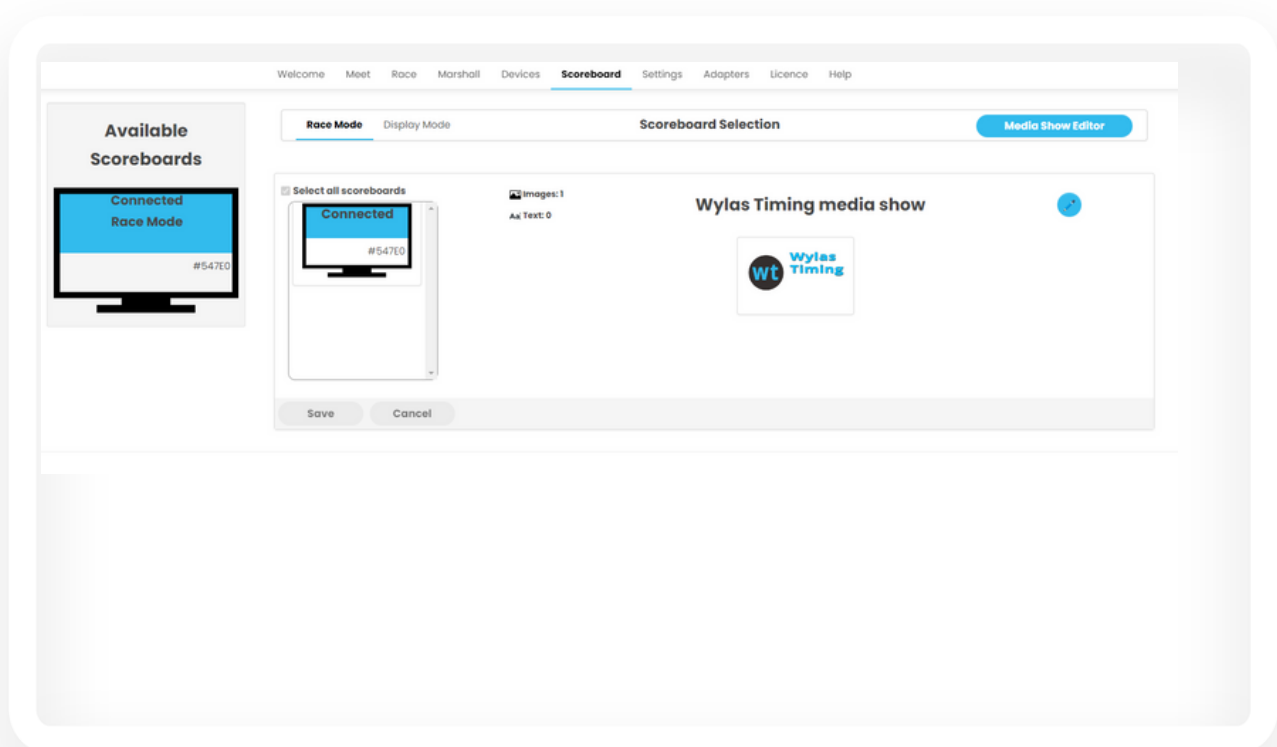

Wylas Timing Scoreboard

Scoreboard Selections

A scoreboard selection consists of a media show (containing a the list of media items to be displayed) and the list of scoreboards on which the media show will be displayed.

There are two types of scoreboard selections:

 
Race Mode

When a race is made ready, the Recorder will pick one item from the selected Race Mode media show and display it for 2 seconds before displaying the race start list. It will do so again when the race is started.

By default, all scoreboards will display the same Media Show. But scoreboards can be configured to display different media shows.

Items will be displayed in the order listed in their media show.

To choose a different media show to display, click on the pencil icon, which will open the Media Show Editor.

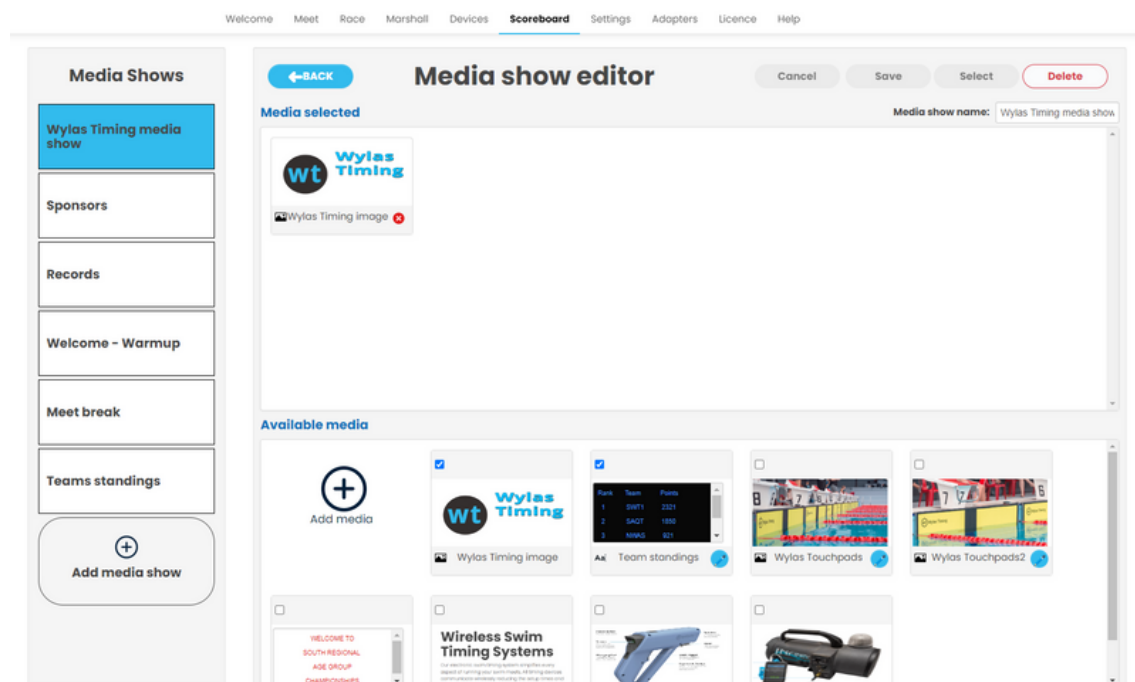


The column on the left displays available media shows. Click on a media show in order to select it.

Click on the select button to apply changes and return to Scoreboard Selection.

Wylas Timing Scoreboard

 Click the save button to save your changes to Race Mode.

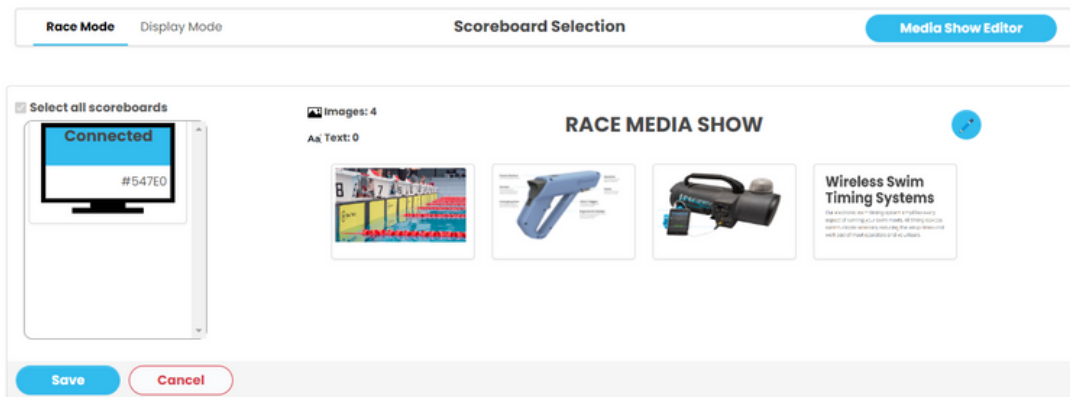

To see your change in action, go to Race tab, select a race and click the Ready button. You will see the first image in your media shows flashed to the scoreboard for 2 seconds before fading out.

First image of media show list displayed:



Start list is displayed after 2 seconds

wt	Girls 10 years 100m Breasstroke	
Event: 1	Race Ready	Final: 1
1		
2	JANIRA TAVARES CORREA	WIS
3	SUMICO IMADA	WIS
4	WALDECILA GUELLI	MANS
5	ELISABETH GRETA ARENS	WIS
6		

Click the Reset button and click the Ready button again. You will see the second item of your chosen media show is displayed before fading out.

Wylas Timing Scoreboard

Display Mode

When a Display Mode Scoreboard Selection is shown, it's media items will be displayed in loop, the duration for each media item is set on the media asset.

Show a Display Mode Scoreboard Selection by clicking on its Display button. It will keep displaying until you click the Stop button .

You can create multiple display mode scoreboard selections. So you can have different selections ready to display pre-meet, post-meet, during breaks etc.

 
A media show will display on all scoreboards by default. To configure different shows for each scoreboard, just uncheck "Select all Scoreboards" and click on



to add one or more available scoreboards.


Add Scoreboard

To create a scoreboard selection click on [+ Add new scoreboard selection](#)
A new (empty) Media Show will appear below.

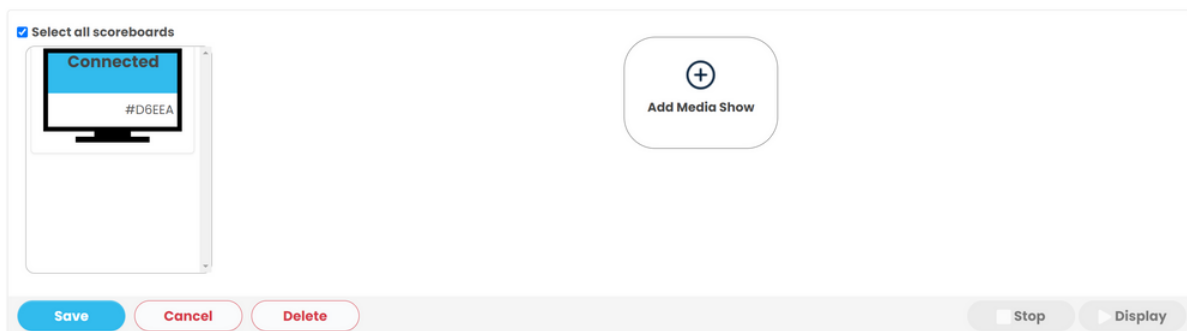

Add a media show by clicking **Add Media Show**

 
This opens the Media Show Editor. From here, you can select or edit any existing media show or create a new one.

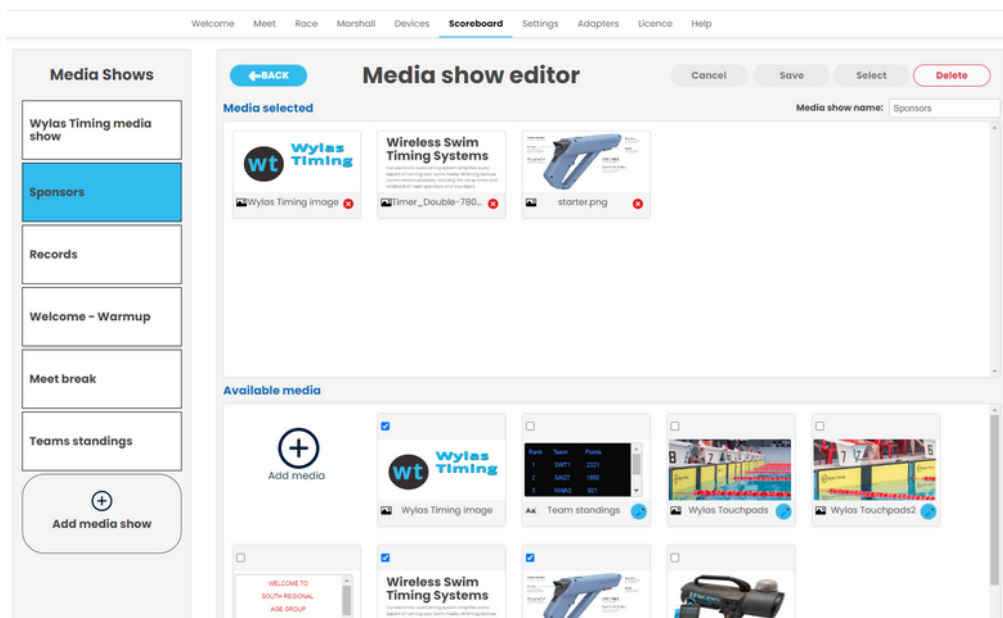


Wylas Timing Scoreboard

The selected Media show will be added to your scoreboard selection.

 Change the duration for each media item by changing "Seconds per asset".

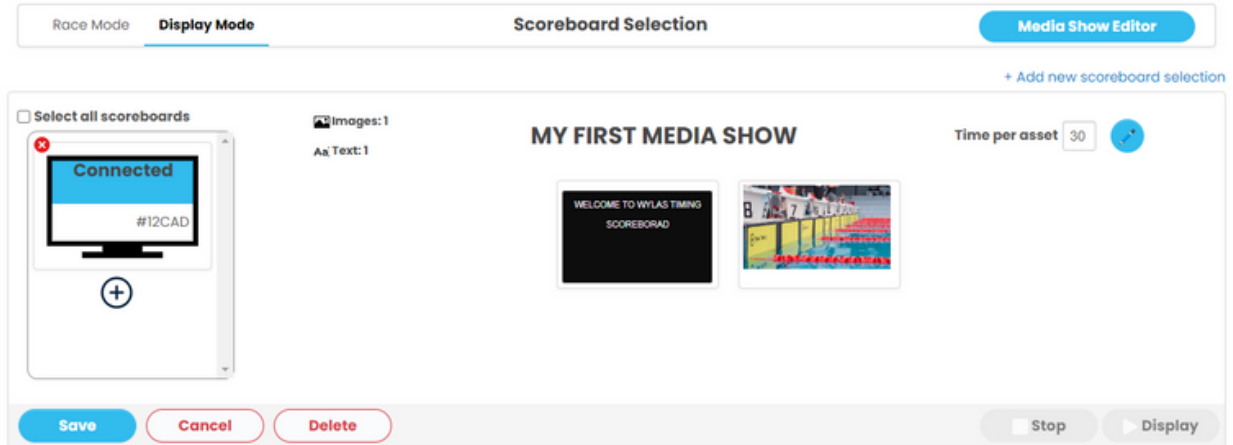

 Click **Save** to save it and click **Display** to start displaying the media show on the selected scoreboard(s).

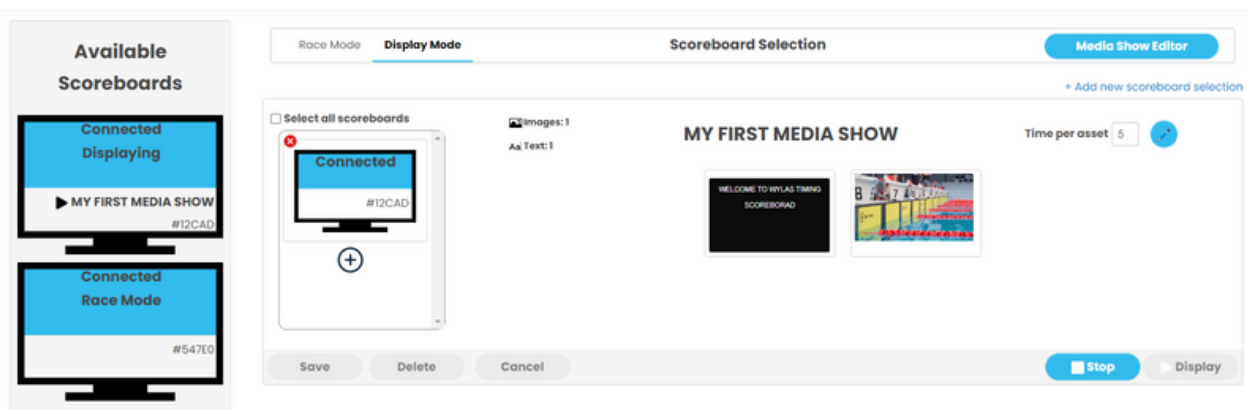

Media items displayed on the scoreboard

 


Click **Stop** to stop display the media show.


Wylas Timing Scoreboard

Media Shows

A media show is a list of media items (text and/or images) that is displayed on the scoreboards connected to the Recorder.


Create a media show by clicking  in the Media Show Editor.

Enter a name for the media show and check the boxes for those Available media items that you want to add to your media show.

You can remove any unwanted items by unchecking the item checkbox or by clicking on the remove icon  of the selected media.

Save your media show using .

 
You can create as many media shows with different media items as required.

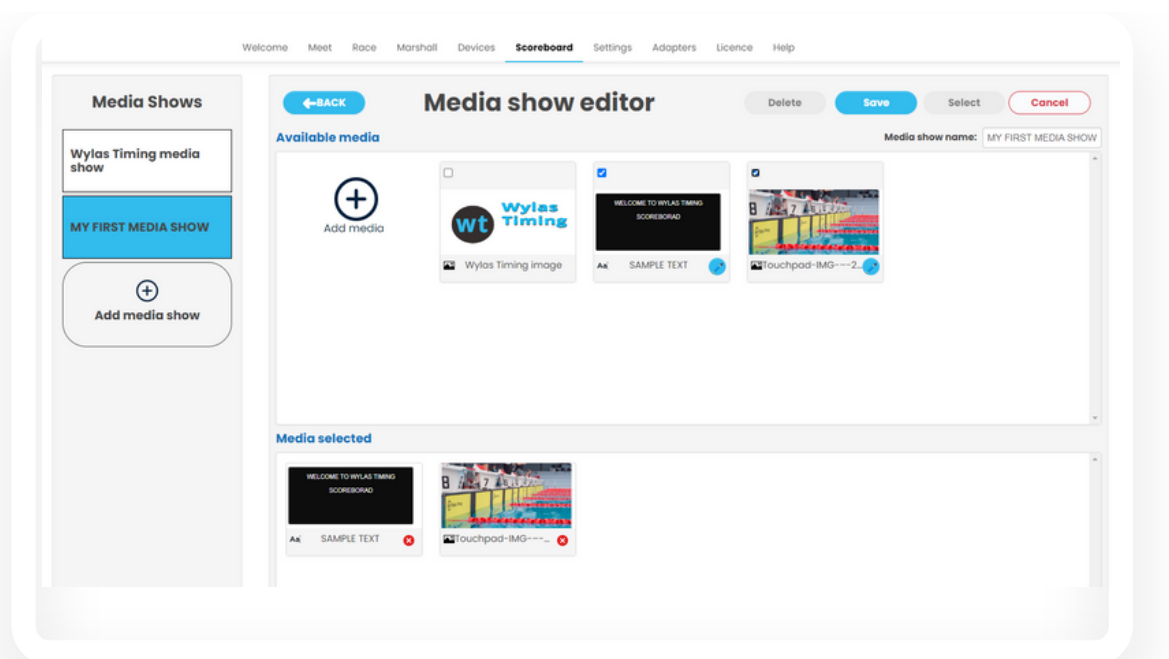

Wylas Timing Scoreboard

Add media items

 From the Media Show Editor you can add any text messages, images and videos that you want to display on the scoreboards connected to Recorder.

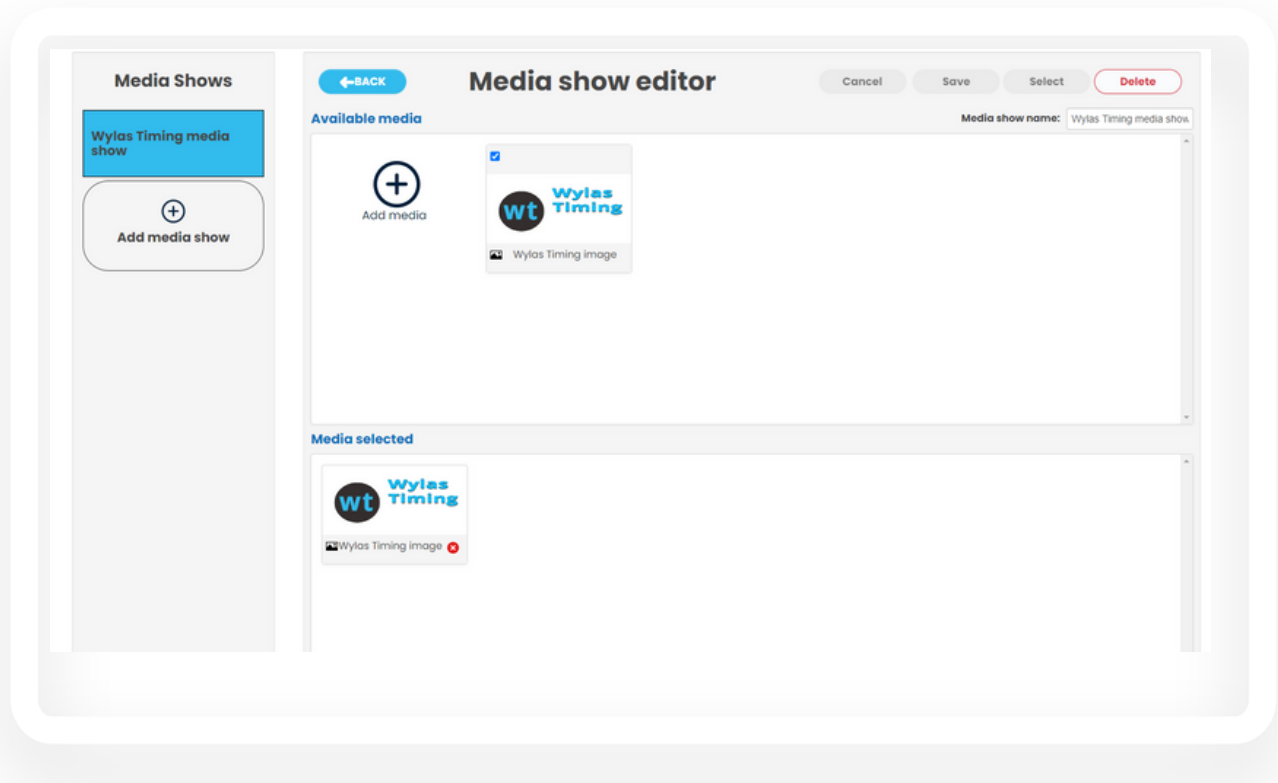


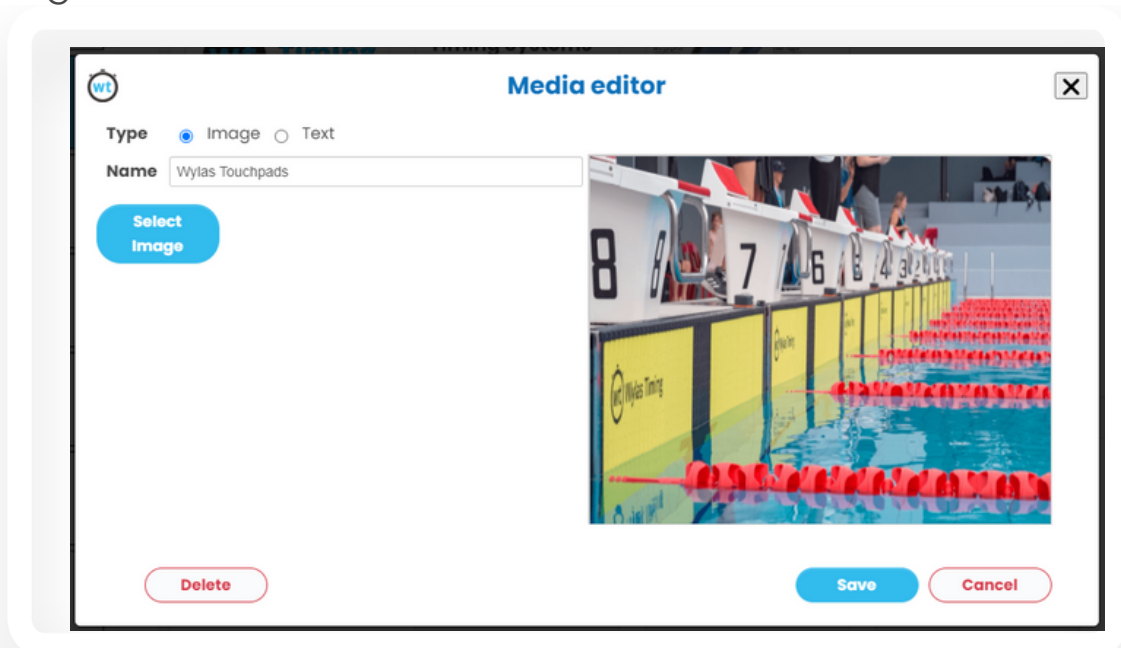 
Click  and choose the type of your new media item.

Image Media



Wylas Timing Scoreboard

Text Media

The screenshot shows the 'Media editor' window. At the top, there's a 'Type' selector with 'Image' and 'Text' options, where 'Text' is selected. Below this is a 'Name' field containing 'SAMPLE TEXT'. A large 'Text' area contains the text 'WELCOME TO WYLAS TIMING SCOREBORAD'. To the right is a 'Preview' window showing the text on a black background. Below the text area are 'Text color' and 'Back color' pickers. The 'Text color' picker shows a light blue color with hex code #171717. The 'Back color' picker shows a black color with hex code #0d0d0d. To the right of the preview is a 'Text align' section with 'Left', 'Center', and 'Right' options, where 'Center' is selected. At the bottom are three buttons: 'Delete' (red), 'Cancel' (grey), and 'Save' (green).

Save your new media items. They are now available to be selected.

The screenshot shows the 'Media show editor' window. At the top, there's a navigation bar with links: 'Welcome', 'Meet', 'Race', 'Marshall', 'Devices', 'Scoreboard', 'Settings', 'Adapters', 'Licence', and 'Help'. Below this is a 'Media Shows' sidebar on the left with a 'Wylas Timing media show' entry and an 'Add media show' button. The main area is titled 'Media show editor' and has a 'Media show name' field set to 'Wylas Timing media show'. There are 'Cancel', 'Save', 'Select', and 'Delete' buttons at the top right. The 'Available media' section shows three items: 'Wylas Timing image' (selected with a blue checkmark), 'SAMPLE TEXT' (with a black background preview), and 'Touchpad-IMG---2' (with a photo preview). The 'Media selected' section shows the 'Wylas Timing image' item.

Wylas Timing Scoreboard App

Setting up WT Scoreboard

If you have purchased a timing system, the scoreboard app will come pre-loaded on your Scoreboard HDMI dongle or Scoreboard box. Just connect the Scoreboard device to the display on which you want to show the scoreboard results via the HDMI port.

If you have sourced your own Android device, such as a tablet, on which to display the scoreboard results, then downloadable the WT Scoreboard app from the Google Play Store.


Step 1

Click on WT Scoreboard icon to start the application. NB: WT Scoreboard can be configured to start when the device boots up so that you just need to switch on your TV. The Scoreboard will try to automatically find and connect the Recorder, after which you will see a screen like below.


The number shown below the connected label is the device id, this value will be useful to identify your scoreboard when setting scoreboard selections.



Step 2

The blue wi-fi icon  indicates that you have a connection to the Recorder Server. Pressing on it will disconnect the Scoreboard from the Recorder.

 
 
Step 3

When the wi-fi icon  appears grey, this will indicate that you have lost connection to the Recorder server. Pressing on it will reconnect the Scoreboard to the Recorder.

Wylas Timing Scoreboard

Scoreboard Settings


You can configure most elements of the Scoreboard, including which rows and columns to show and how and when to scroll. You can view the various options on the screens below:

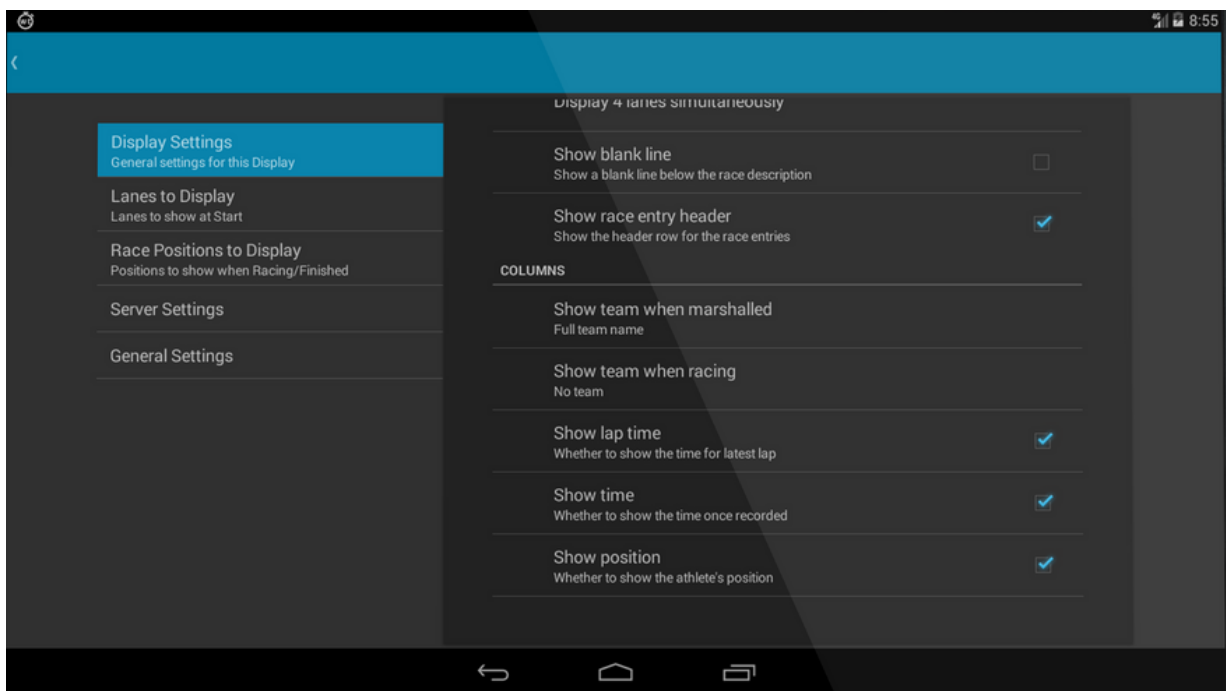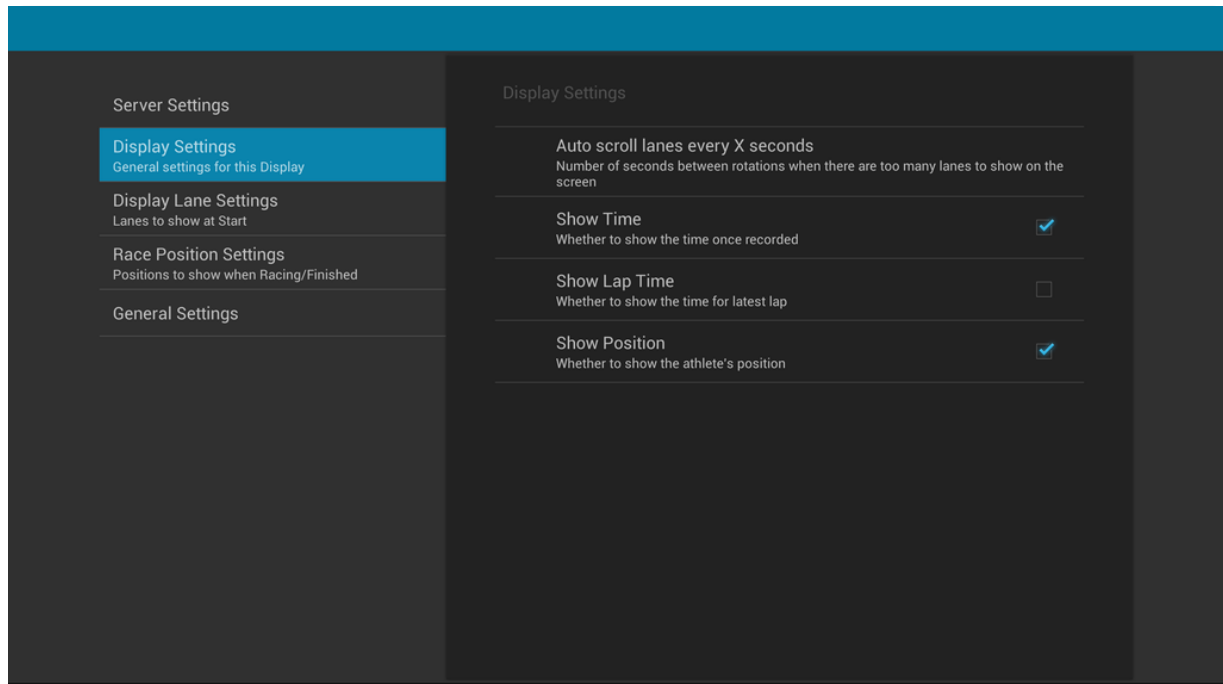

Wylas Timing Scoreboard

Lane Settings

 If you have multiple Scoreboards, you can configure each Scoreboard to only show certain lanes at the start of each race. For instance, your left hand Scoreboard might only show those lanes on the left hand side of a pool.

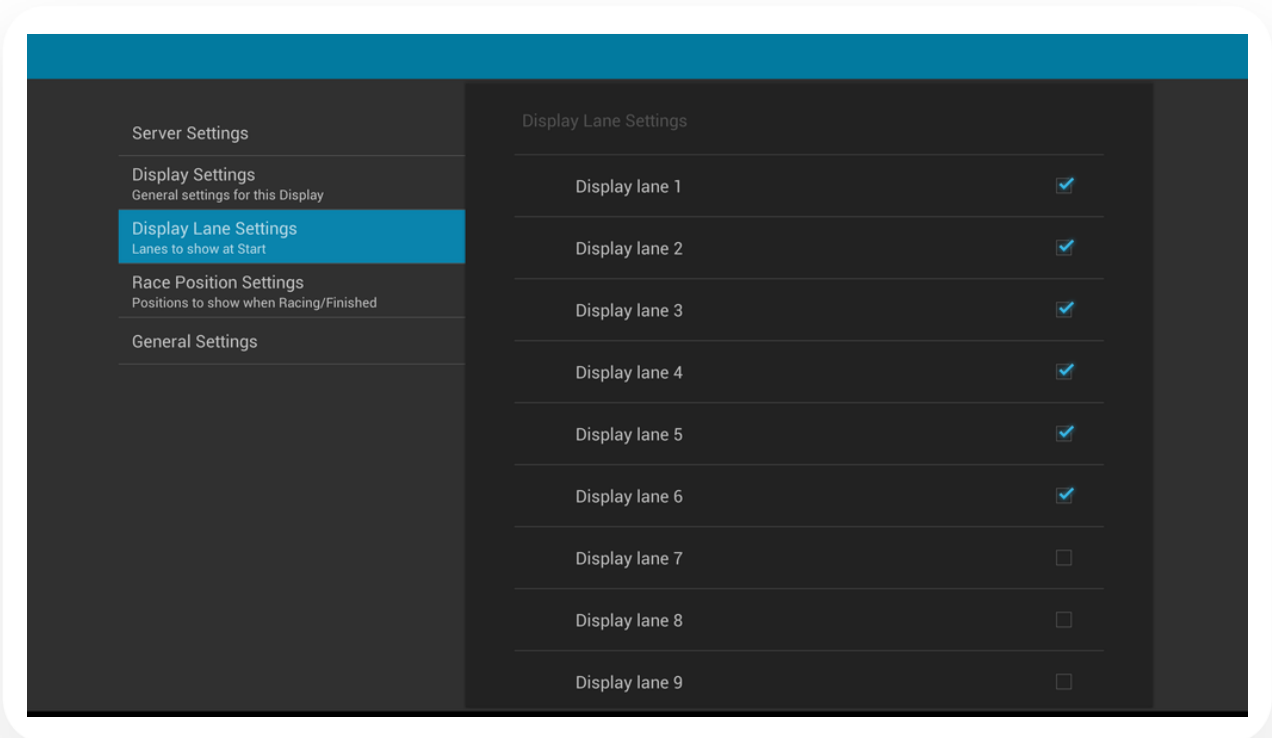


In the image above, you can see it has been configured to show lanes 1 through 8. If more lanes are configured that can be displayed at one time, then the Scoreboard will scroll through all the configured lanes.

Wylas Timing Scoreboard

Race Position Settings

 By default, Wylas Timing will display the results in position order, ie, 1st place at the top, then 2nd and so on. Alternatively, you can show results in lane order. If you have multiple Scoreboards, you can configure each Scoreboard to only show certain race positions at the end of a race. For instance, your left hand Scoreboard might show race positions 1-4 and the right hand Scoreboard might show race positions 5-8.

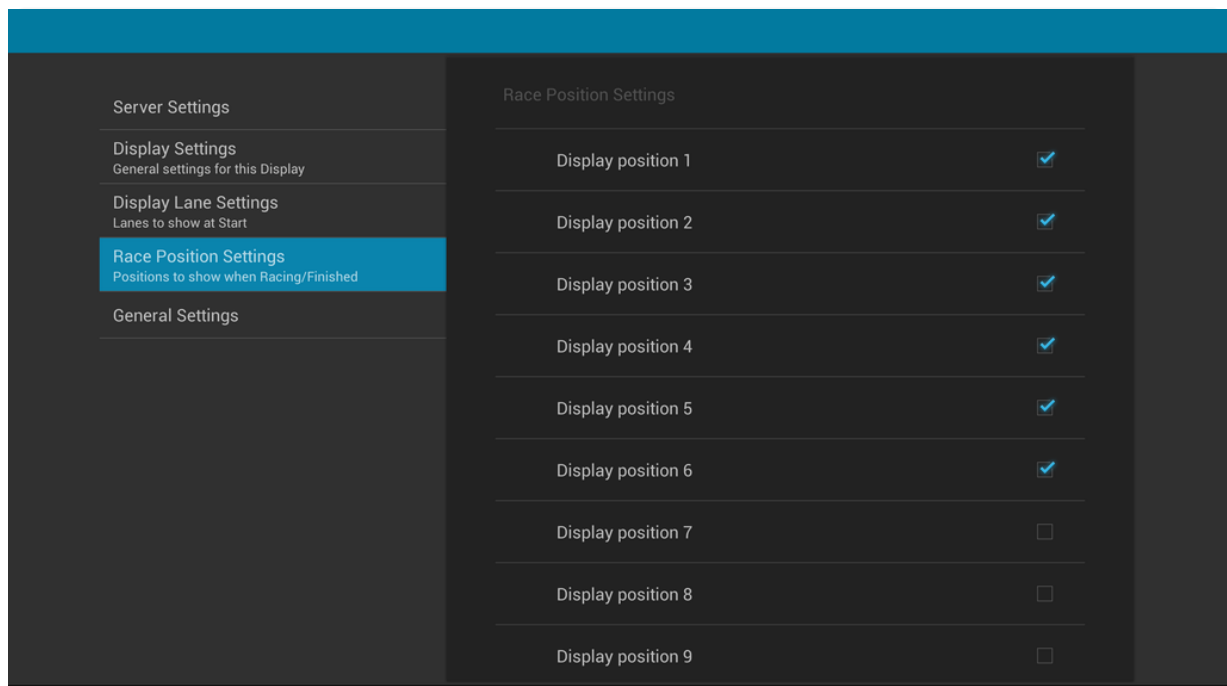


If more positions are configured than are able to be shown at one time, then the Scoreboard will scroll through all the configured positions.

Wylas Timing Scoreboard

Alternating background lines setting

 If you want the athletes names, lanes and times to be more readable, you can set alternating background lines settings.

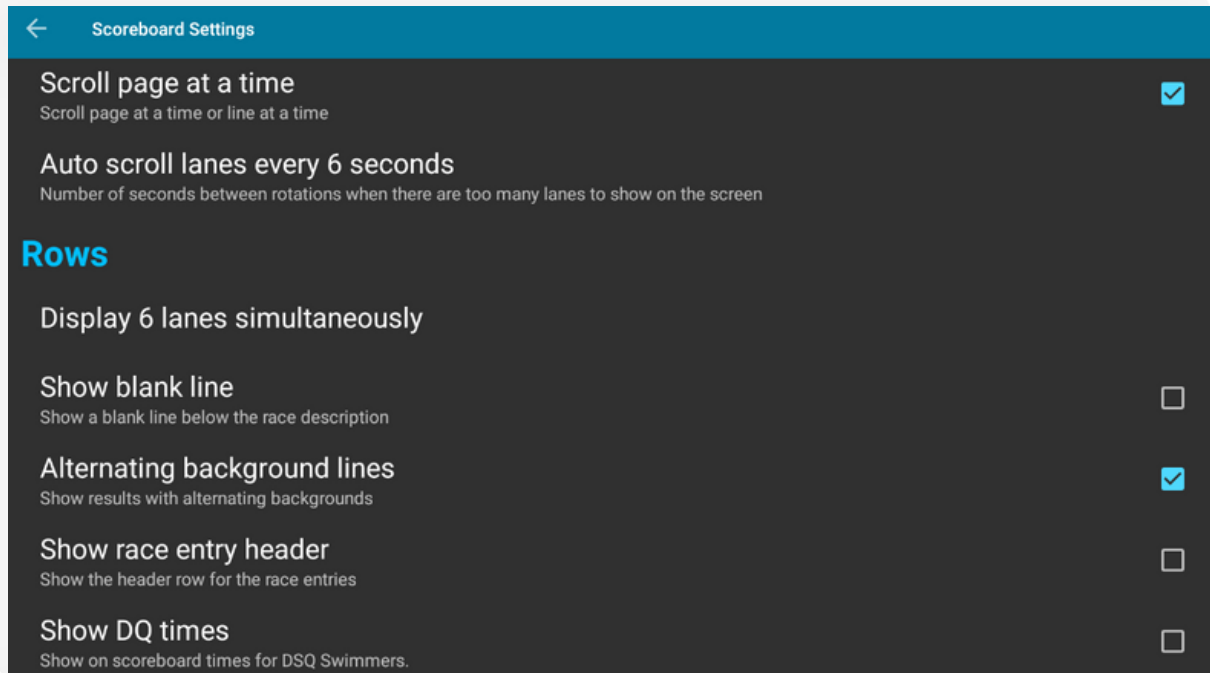


When activating this setting, the start list looks like:

Boys 10 years 100m Freestyle		
Event: 2	Race Ready	Final: 1
1	ABBY SCURR	MANS
2	CIARA BROWN	MAN
3	JACOB ROSE	MAN
4	ARCHER SCANLAN	MAN
5	HAMISH	MAN
6	LEVI MOXEY	MAN


Wylas Timing Scoreboard

Name format setting

 The scoreboard app includes a setting to apply a shortening method for the athletes names. This is a useful setting when entry lists contain long names. By default the name format is set to full name (first name + initials + last name).

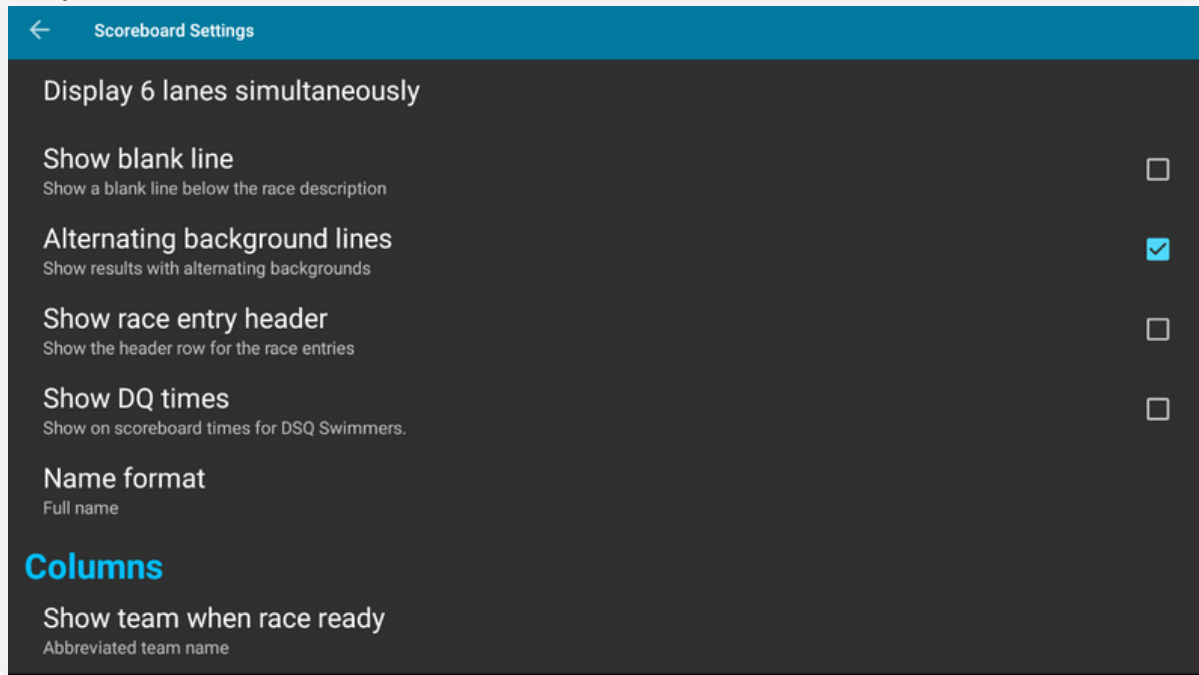

Names shortening methods available:

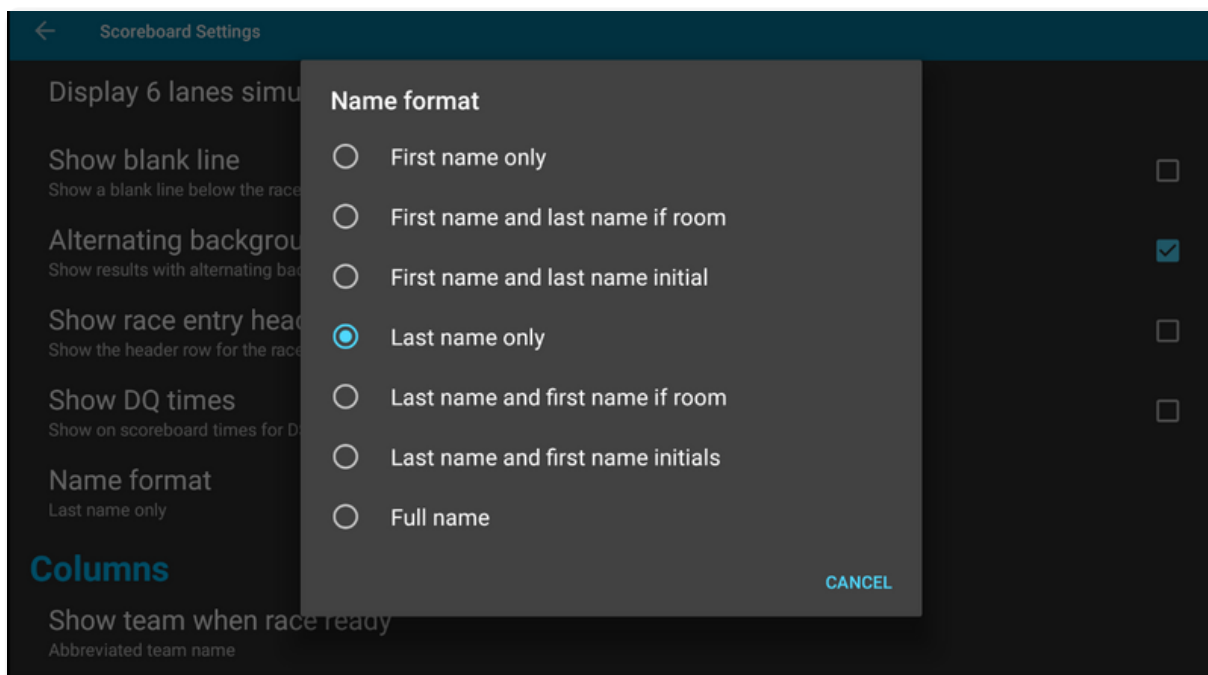 

Wylas Timing Scoreboard

Name format setting

Once the new setting is applied, the start list names are displayed with the new name format selected.

Last name only:

	Boys 10 years 100m Freestyle	
Event: 2	Race Ready	Final: 1
1	SCURR	MANS
2	BROWN	MAN
3	ROSE	MAN
4	SCANLAN	MAN
5	BLACKMORE	MAN
6	MOXEY	MAN

First name only:

	Boys 10 years 100m Freestyle	
Event: 2	Race Ready	Final: 1
1	ABBY	MANS
2	CIARA	MAN
3	JACOB	MAN
4	ARCHER	MAN
5	HAMISH	MAN
6	LEVI	MAN

Wylas Timing Scoreboard

Display a Race

When a race is readied, the details for the race, along with the athletes for each of the lanes configured in Lane Settings, will be displayed.



25m Backstroke 0-6yrs

Event: 6 **Marshalled** Final: 1

1	ABBY SCURR	WSSC
2	CIARA BROWN	WSSC
3	JACOB ROSE	WSSC
4	ARCHER SCANLAN	WSSC
5	HAMISH BLACKMORE	WSSC
6	LEVI MOXEY	WSSC

When a race is started, the running clock will display on the screen.



25m Backstroke 0-6yrs

Event: 6 **Marshalled** Final: 1

1	ABBY SCURR	WSSC
2	CIARA BROWN	WSSC
3	JACOB ROSE	WSSC
4	ARCHER SCANLAN	WSSC
5	HAMISH BLACKMORE	WSSC
6	LEVI MOXEY	WSSC

Wylas Timing Scoreboard

Display a Race

As each time is recorded by a Timekeeper, it will immediately appear on the Scoreboard.



25m Backstroke Female 9yrs

Event: 11

15.70

Final: 1

L NAME

TIME P

3 ELLE CORBENICI

14.32 1

Each line shows the lane number, athlete name, time and position.



25m Backstroke Female 9yrs

Event: 11

19.10

Final: 1

L NAME

TIME P

3 ELLE CORBENICI

14.32 1

4 ISABELLA ROSER

18.02 2

Wylas Timing Scoreboard

Display a Race



25m Backstroke Female 9yrs

Event: 11

21.70

Final: 1

L	NAME	TIME	P
3	ELLE CORBENICI	14.32	1
4	ISABELLA ROSER	18.02	2
6	HARMONY SOLEY	20.86	3

If an athlete is disqualified, then the entire line is displayed in red in strikethrough.



Boys 10 years 100m Freestyle

Event: 2


Finalised

Final: 1

1	ABBY	M...	1:01.92	1
6	LEVI	M...	DSQ	
5	HAMISH	M...	1:08.33	2
4	ARCHER	M...	1:09.22	3
3	JACOB	M...	1:31.23	4
2	CIARA	M...	1:32.22	5

Wylas Timing Scoreboard

 If you want the times for disqualified athletes to be shown, go to scoreboard settings and uncheck the setting Show DQ Times:

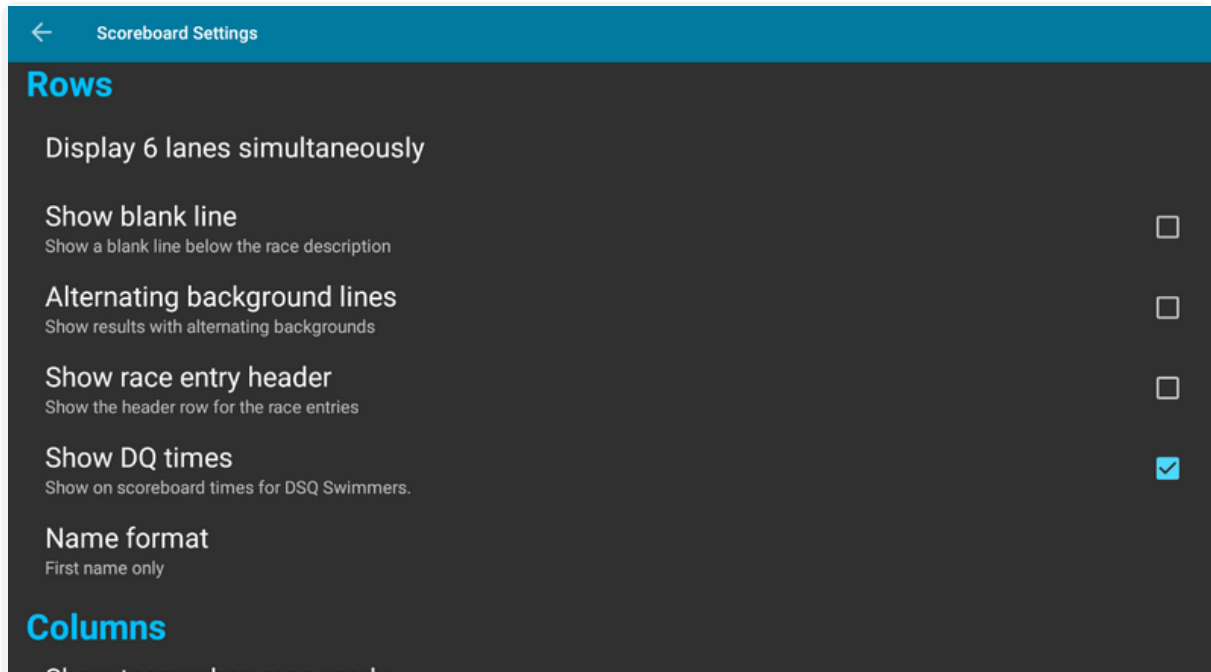

← Scoreboard Settings

Rows

Display 6 lanes simultaneously

Show blank line
Show a blank line below the race description ☐

Alternating background lines
Show results with alternating backgrounds ☐

Show race entry header
Show the header row for the race entries ☐

Show DQ times
Show on scoreboard times for DSQ Swimmers. ☒

Name format
First name only

Columns

The entire line will be displayed as it follows:




wt		Boys 10 years 100m Freestyle	
Event: 2		Finalised	Final: 1
1	ABBY	M...	1:01.11 1
6	LEVI	M...	1:05.33
5	HAMISH	M...	1:08.22 2
4	ARCHER	M...	1:09.22 3
2	CIARA	M...	1:15.22 4
3	JACOB	M...	1:30.22 5

Wylas Timing Scoreboard

Display a Race

When the next race is readied a new list of athletes appear.



Girls 10 years 50m Butterfly

Event: 3

Race Ready

Final: 1

1

INGO KOELLE

WIS

2

ALCINDO

WIS

3

NOEL CASTILHO

WIS

4

PAULO FAVETTA

MAN

5

SUMICO IMADA

WIS

6

WALDECILA GUELLI

MANS